

BOSCH

F-96-B

ZASTOSOWANIE BOSCH

GDR 9.6V, GSR9.6V, GSR9.6-1, GSR 9.6-2, PAG 9.6V, PLI 9.6V, PSR9.6VE-2, PSR960

F-12-B

ZASTOSOWANIE BOSCH

GDR12V, GDS12V, GLI12V, GSB12VE-2, GSR12-2, GSR12V, GSR12VE-2
GSR12VES, PAG12V, PLI12V, PSB12VE-2, PSR12VE-2, PSR1200VE-2,

F-14-B 1,5Ah 2,0Ah 2,6Ah

ZASTOSOWANIE BOSCH

GDR14.4V, GDS14.4V, GHO14.V, GLI14.4V, GSB14.4VE-2, GSR14.4V,
GSR14.4VE-2, GSR14.4-2, PAG14.4V, PDR14.4V, PKS14.4V, PLI14.4V,
PSB14.4VE-2, PSB14.4V, PSR14.4-2, PSR14.4V, PSR14.4VE-2, PSR1440,
PST14.4V.

F-18-B

ZASTOSOWANIE BOSCH

GDR18V, GDS18V, GHO18V, GKS18V, GLI18V, GSA18VE, GSB18VE-2,
GSR18V, GSR18VE-2, GST18V, PLI18V, PSB18VE-2, PSR18VE-2

F-12-BS

ZASTOSOWANIE BOSCH

GBM12VES-2, GBM12VES-3, GBM12VSP-3, P-3, GSBVE-2, GSB12VES-2
GSB12VSP-2, GSR12-1, GSR12VGSR12VE-2, GSR 12VES-2, GSR12VET,
GSR12VPE-2GSR , GSR12VSH-2, PAG12V, PSB12VSP-2, PSR12VE.